







# LIVING SPACES

A	A1119-A base	 X 1
B	A1119-B nut	 X 4
C	A1119-C spanner	 X 1
D	A1119-D headrest	 X 1


208604/227251/227252/246953

AMALA CHAIR




## 1

remove the nut from screw on the bottom of chair before install the base

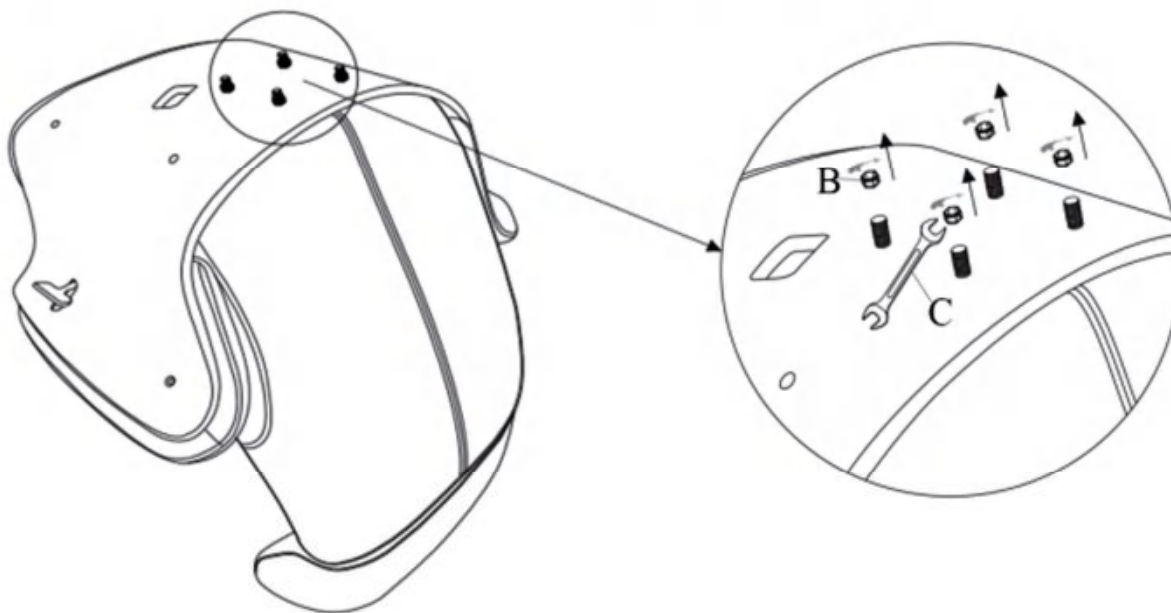


## 2

do not fully tighten the bolts until all bolts are installed

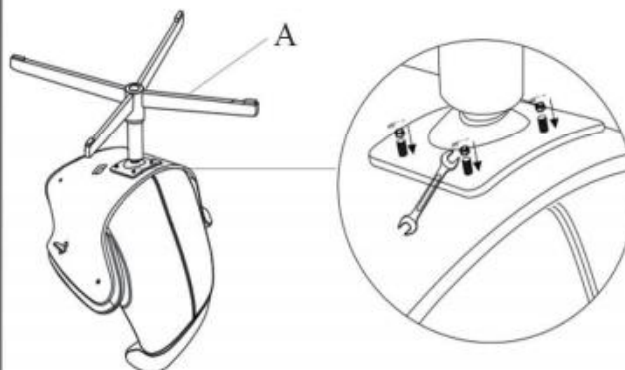

## 3

insert the headrest

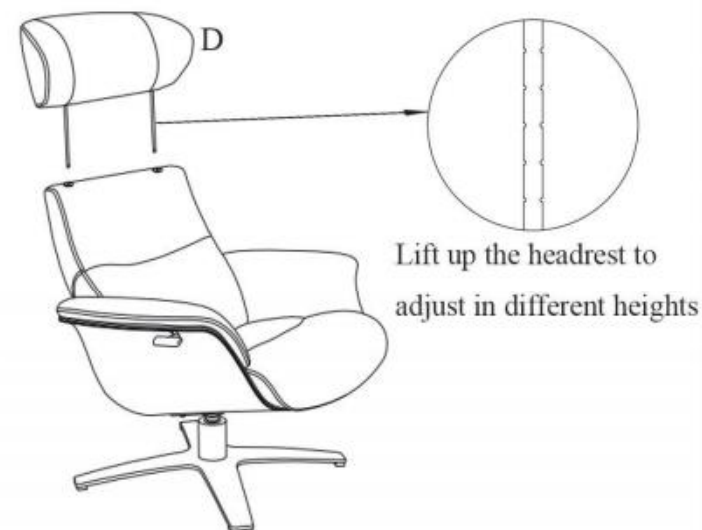


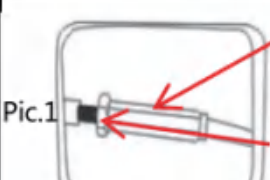
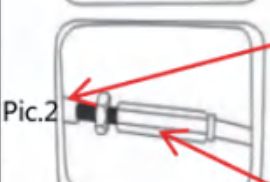
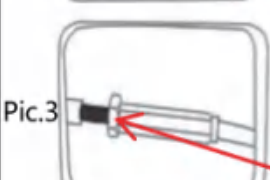
Living Spaces Information	
LS SKU:	208604/227251/227252/246953
LS Product Name:	AMALA CHAIR
Vendor Model #:	A1119C
Vendor Collection:	CHAIR


CODE	PART #	DESCRIPTION	QUANTITY	NOTES
1	A1119C-A	Base	1	
2	A1119C-B	Nut	4	
3	A1119C-C	Spanner	1	
4	A1119C-D	headrest	1	

NOTICE:

## Adjustment Method




<p>1. Leaning back, the backrest will automatically open. Standing up, the backrest can not automatically close.</p>	<p>1. Tools: vice, wrench 2. Method : 1). Loosen the adjustment nut. 2). Shorten (clockwise) the adjustment distance. 3). Fix the adjustment nut.</p>	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Fix the connection with a vice</p> <p>Loosen the adjustment nut with a spanner</p> </div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Clamp the hardware casing with a vice</p> <p>Turn the connection clockwise or anticlockwise with a spanner</p> </div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Lock the adjustment nut with a spanner (Pic.1)</p> </div> </div> <p>Normally, shorten or lengthen 2-3mm, adjusted as appropriate.</p>
<p>2. Backrest can not open.</p>	<p>1. Tools: vice, wrench 2. Method : 1). Loosen the adjustment nut. 2). Lengthen (anticlockwise) the adjustment distance. 3). Fix the adjustment nut.</p>	




Push Forward

## Adjustment Method of Headrest

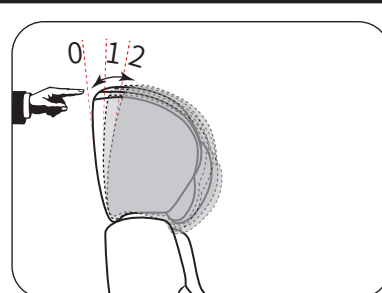

● Push the headrest forward slightly, and you can customize 3 positions for your headrest (including the first position-0).

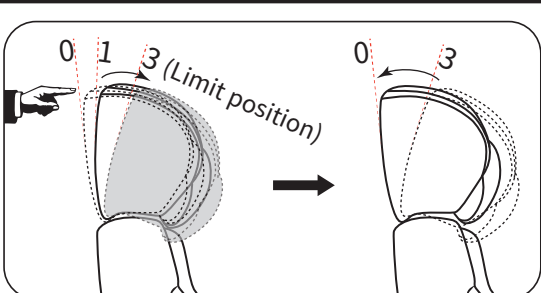

● Reset:  
To reset the headrest back to its original position you simply push all the way forward and then all the way back