### A A T H

## ASSEMBLY INSTRUCTIONS

ITEM NO: B8270/B8280 - F - HBFB FULL HEADBOARD/FOOTBOARD

#### (BOX 1) BOX OF HEADBOARD / FOOTBOARD

ITEM	DRAWING	DESCRIPTION	QTY
A		HEADBOARD PANEL	1
В		LEFT HEADBOARD LEG	1
C		RIGHT HEADBOARD LEG	1
D		FOOTBOARD	1
E		WOODEN SLAT	4
F	1	WOODEN SUPPORT	4

### (BOX 1) HEADBOARD / FOOTBOARD HARDWARE LIST

ITEM	DRAWING	DESCRIPTION	QTY
1		ALLEN WRENCH (M4)	1
2	97 <b>9</b> 1000	CONNECTION BOLT (M6 x 50mm) W/WASHER & SPRING WASHER	8
3	9 <b>9</b> 000	CONNECTION BOLT (M6 x 25mm) W/WASHER & SPRING WASHER	8
4	Ø Trans	FLAT HEAD SCREW (#8 x 1 1/8")	8
5		Assembly Tool Not Included	1




#### (BOX 2) BOX OF SIDE RAIL

IT	EM	DRAWING	DESCRIPTION	QTY
	G		SIDE RAIL	2

#### (BOX 2) SIDE RAIL HARDWARE LIST

ITEM	DRAWING	DESCRIPTION	QTY
6		WOOD DOWEL (M8 x 30mm)	8

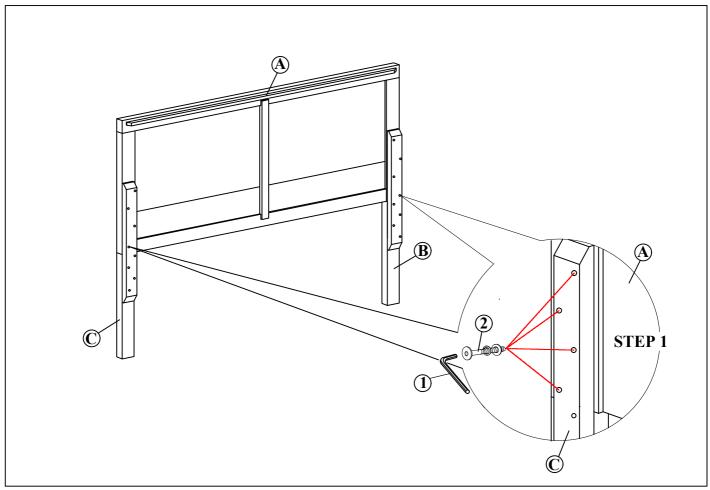

#### THE HARDWARE IS LOCATED IN THE PACKING ITEMS


NOTE: MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHNESS OF ALL SCREW EVERY 6-8 WEEKS.

#### **CLEANING INSTRUCTION**



# ASSEMBLY INSTRUCTIONS

ITEM NO: B8270/B8280 - F - HBFB FULL HEADBOARD/FOOTBOARD

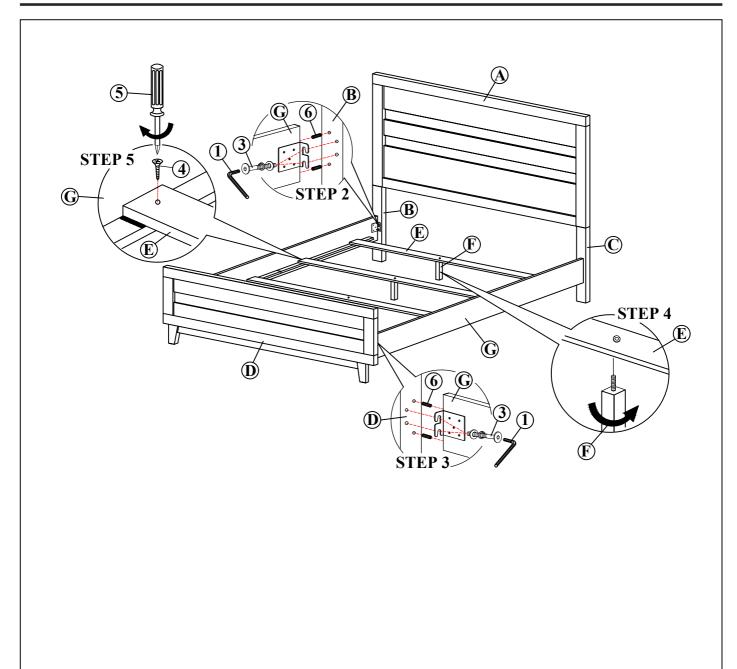

#### THE HARDWARE IS LOCATED IN THE PACKING ITEMS

NOTE: MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHNESS OF ALL SCREW EVERY 6-8 WEEKS.

#### **CLEANING INSTRUCTION**