












LIVING SPACES


1	PD5333-62CB		X1
2	PD5333-62SE		X1
3	PD5333-62LG		X2
A	PD5333-62HD-A		X4
B	PD5333-62HD-B		X3
C	PD5333-62HD-C		X4
D	PD5333-62HD-D		X11
E	PD5333-62HD-E		X11
F	PD5333-62HD-F		X1
G	PD5333-62HD-G		X1

LUIS






1

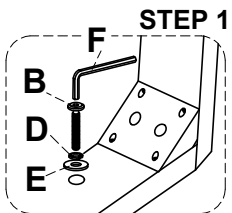


2

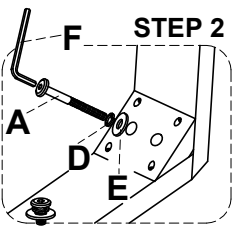

3

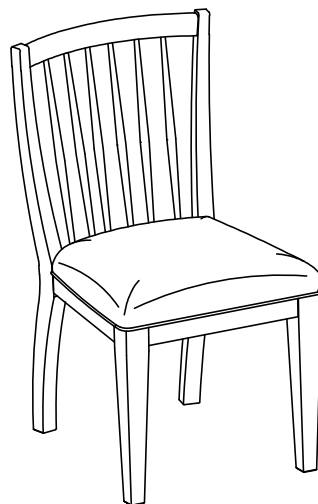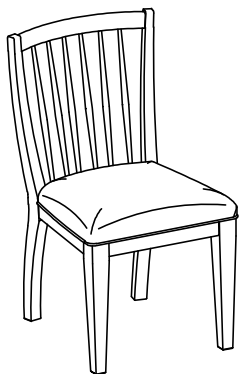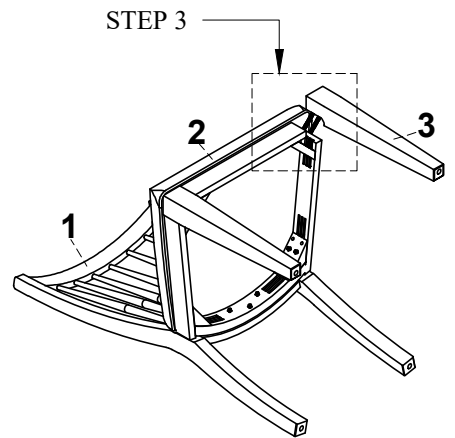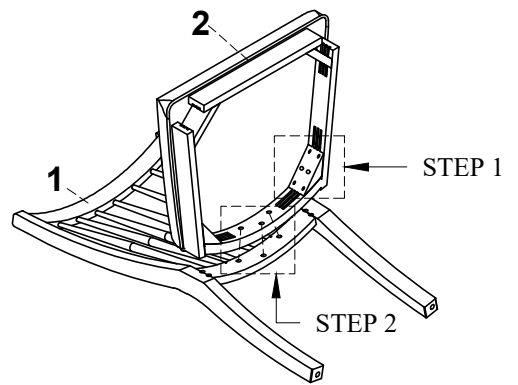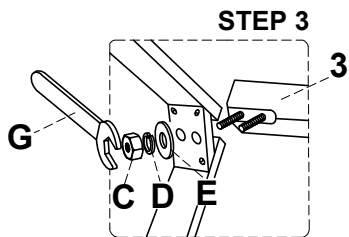

312846
D5333-62 WOOD BACK DINING CHAIR

 

Not provided



WARNING:
ONLY USE THE HAND
TOOLS PROVIDED