



LIVING SPACES

2024-85PHR-S
EASTWOOD POWER
RECLINER
USER MANUAL

Troubleshooting Guide

This guide is to help with a non-functioning power recliner

Components:

- **Switch** – mounted on the side of furniture and controls all motors and functions (reclining, power headrest, etc.) via a direct connection with motors.
- **AC wall plug** – connects the power transformer to the power outlet.
- **DC cord** – connects the power transformer to the DC socket (mounted on the rear bottom of LAF arm stump).
- **DC socket** – receives power from DC cord then transfer to motors.
- **Power Transformer** – A box-shaped unit to transfer 110V AC power to 25V DC power to supply for the furniture.
- **Seat / Headrest Motor** – motors mounted on mechanism to drive movement on seat/headrest via switch control.
- **Mechanism** – the motion mechanical frame unit within the piece of furniture.
- **USB Ports**- located on side switches for charging USB-supported devices.
- **Junction box**- receives power from DC socket then transfer to speakers.
- **Speakers**- mounted on the side of outside arm and works via bluetooth connection (with smart device and/or TV).
- **Y cord**- connects the switch to the light cupholders.
- **Light cupholder**- mounted at the top of arm stump.

Quick Trouble-Shoot for Motors Malfunctioning:

Below are some possible reasons to cause motors to stop working:

1. Loose connection or wires not securely plugged in.
2. Broken side switch
3. Broken DC socket
4. Broken power transformer (especially when ALL motors stop working on one unit)
5. Power cords damaged
6. Motors failure

NOTE: In some cases a button on the switch might be stuck after being pushed, thus continuously activating the motor. This can cause overheating or even damages on the power transformer.

Trouble-Shooting Guide

序号 NO	故障 The fault	诊断 diagnosis	排除 To rule out
1	通电后电源指示灯不亮无输出 Power supply don't light up, and no output	电源损坏 The power supply fail	更换电源 Replace a new power supply
2	电源指示灯闪烁 Power supply light flashing	电源自我保护功能启动信号, 电气件和线材出现短路现象 Power self-protection function start signal, parts and wires may be shorted	1、检查电机和手控开关线材表面是否有压伤 Check the surface of actuator/hand controller, whether is crushed 2、电机、开关内部短路, 更换部件 Internal shorted in the actuator/hand controller, replace the part.
3	电源指示灯常亮, 按手控开关后沙发无动作 The light of power supply is always on, press the hand controller, and the actuator can't work.	1、电机未通电, 检查电源插头是否松脱 Actuator isn't powered, check whether the plug is loose.	重新接插好插头 Reconnect the plug..
		2、检查插头后, 电机仍不动作, 交换电机后可动作 After checking the plug, the actuator still can't work, exchange the actuator is OK.	更换电机 Replace a new actuator.
		3、检查插头后, 电机仍不动作, 交换手控开关后可动作 After checking the plug, the actuator still can't work, exchange the controller is OK.	更换手控开关 Replace a new hand controller.
4	电机开出后无法收回 The actuator cannot be retracted after it has been removed	1、插头是否松动 Check whether the plug is looses.	重新接插好插头 Reconnect the plug..
		2、电机内部故障 The actuator internal failure.	更换电机 Replace a new actuator.
5	电机运行过程中有噪音 There is noise during actuator moving	1.电机本体噪音 The noise in the actuator.	更换电机 Replace a new actuator
		2.铁架部件之间有干涉 The noise caused by the interference of mechanism.	更换铁架 Replace a new mechanism.

Trouble-Shooting Guide (Cont'd)

序号 NO	故障 The fault	诊断 diagnosis	排除 To rule out
6	蓝牙音箱工作不正常 Bluetooth Speaker Box is not working properly	1、检查连接是否松动 Check if the connection is loose	重新接插好插头 Reconnect the plug.
		2、音乐播放声音失真 Bluetooth Speaker Box sound distortion	更换蓝牙音箱 Replace a new Bluetooth Speaker Box.
		3、蓝牙连接丢失 Bluetooth connection lost	更换蓝牙音箱 Replace a new Bluetooth Speaker Box.
7	灯杯不发光 LED Lamp Cup don't shine	1、检查连接是否松动 Check if the connection is loose	重新接插好插头 Reconnect the plug.
		2、LED灯珠损坏 LED Lamp beads damaged	更换灯杯 Replace a new LED Lamp Cup

Power Recliner PARTS

2024-85PHR-S

JLDK.15.08.05/Switch

R5.504.01.120K/Power Cord AC

R5.227.01.007A/G-Type Female Plug(DC)

JLDP.10.022.000/Power Supply

R5.217.01.007C/
Short Line Male Plug(DC)

B.12439/
12V Step-down Module


FP.06.01.01/
Bluetooth Speaker Box

JLDQ.18.134.333Z03/Seat Motor

JLDQ.14.305.114B/Headrest Motor

JLDP.14.028.000/LED Lamp Cup

R5.229.01.006/Y-Cable

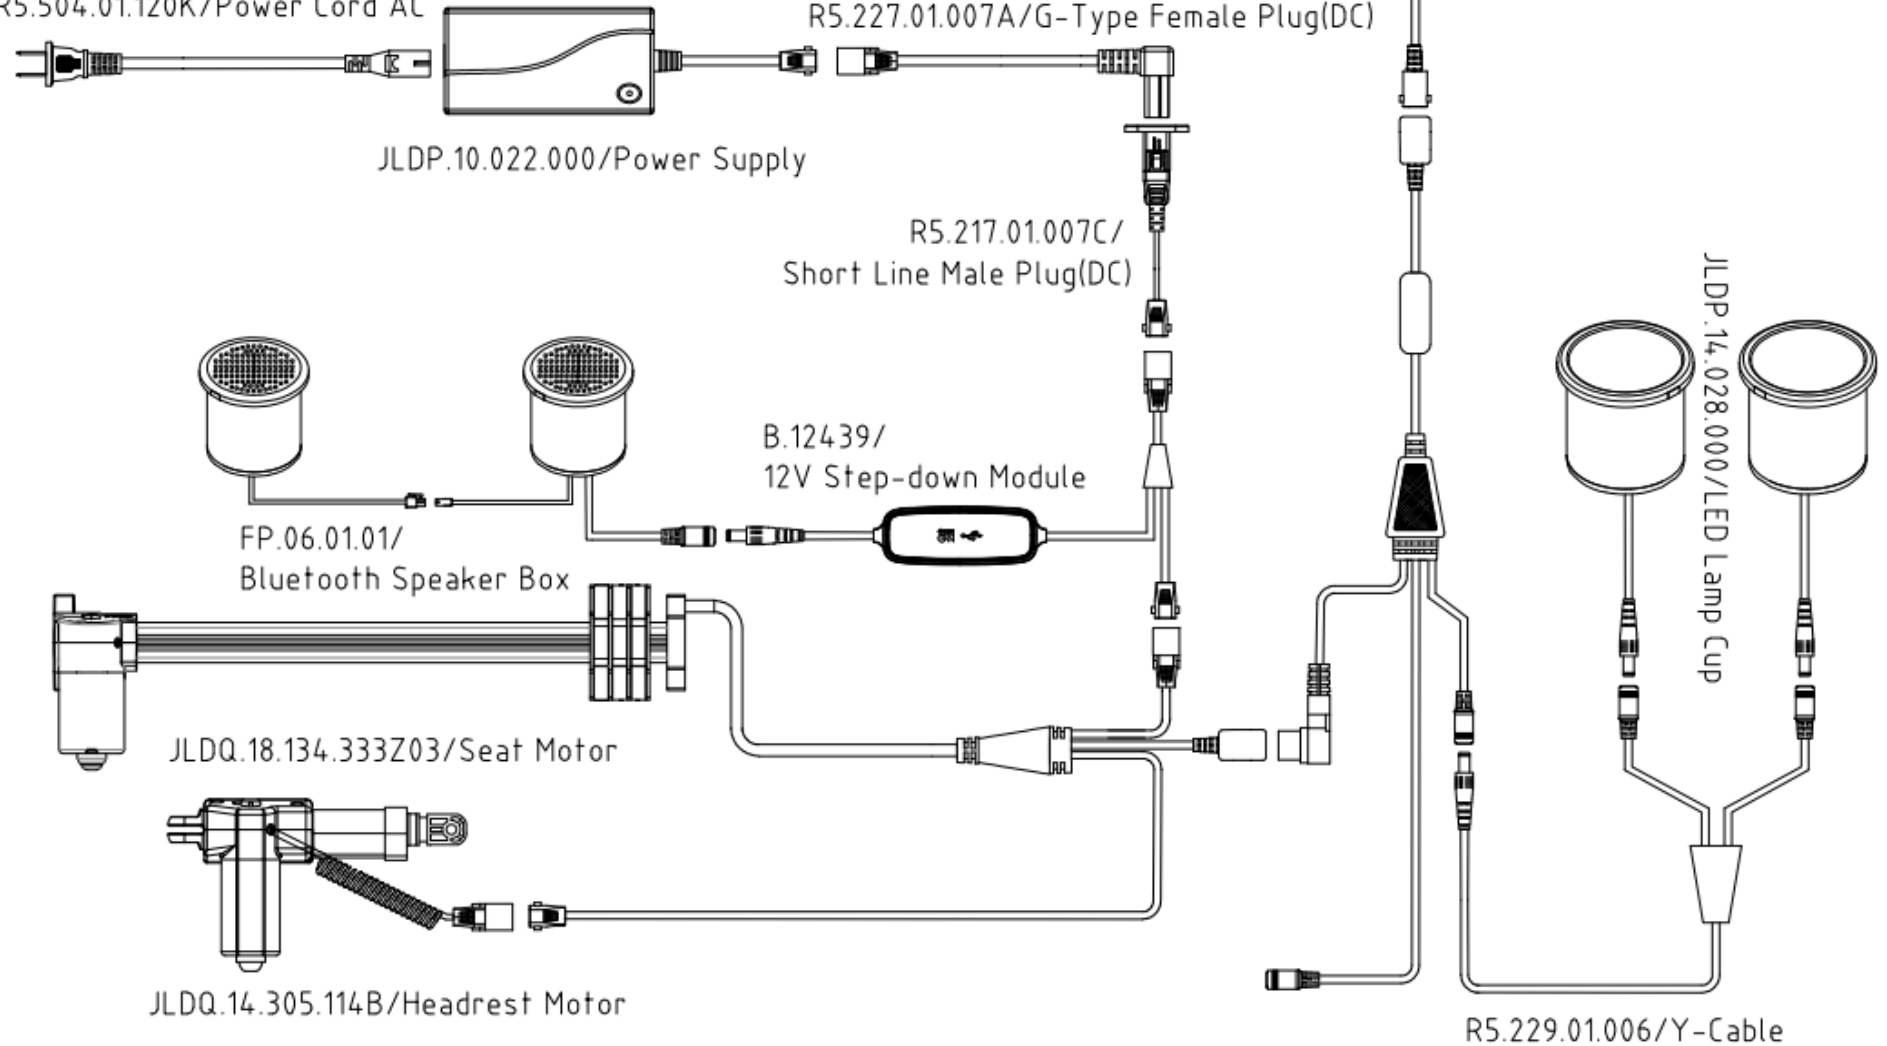

Power Recliner Trouble Shooting



Check if the green light on power transformer is on

No

Yes



1. Check power cords integrity and connection to transformer.
2. If power cords undamaged, and connection secured, replace power transformer.



Check connection security and components integrity on DC socket and power cable.



Check connection security and integrity of motor's 2-pin cable

For dual-power recliners, please check connection and integrity of Y-Cable splitter.