



LIVING SPACES

Summit Collection: Full Bookcase Bed

7030-01165 KIT

4655 Frame Rails/4658 Heaboard/4659 Footboard



(Scan code for instructional video)

PARTS LIST

BOX 1: 4658 Summit Bookcase Bed Full Headboard

Part #	Picture	Description	Quantity
4658		Summit Bookcase Bed Full Headboard	1

BOX 2: 4659 Summit Bookcase Bed Full Footboard


Part #	Picture	Description	Quantity
S0179END		Summit Bookcase Bed Full Footboard	1

BOX 3: 4655 Summit Panel Bed Full Frame Rails

Part #	Picture	Description	Quantity
S1001SRL		5/4 x 6 x 75 Mattress Rail	2
140533/40		Full Individual Slat	3
5040-43183		7MM x 100MM Decorative Lag Bolt	8
5040-35410		#6 x 1 1/4 Phil Flat Slat Scew	10
ALNWR		4MM Allen Wrench	1
PWRDD		4MM Power Drill Driver	1

Make sure you have all parts before beginning assembly. If you need a part, contact Living Spaces

COMPLETED ASSEMBLY

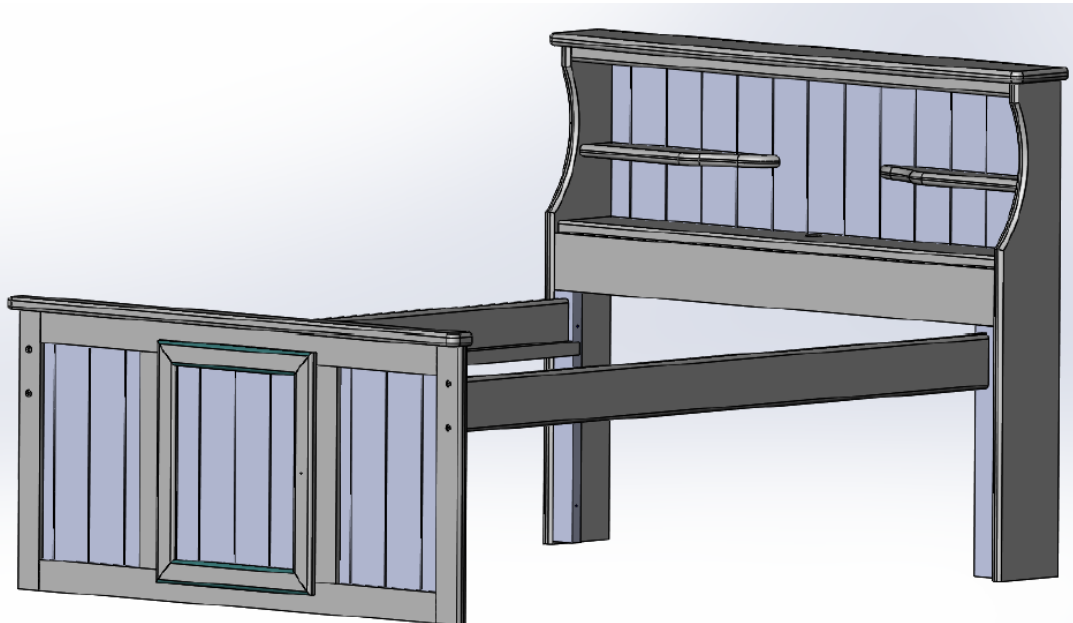


TOOLS REQUIRED: Phillips Head Screwdriver - recommended: Drill for 4mm driver and phillips bit (not included)

WHEN USING THE 4mm DRIVER WITH A DRILL, MAKE SURE THAT THE 4mm DRIVER IS FULLY SEATED INTO BOLTS BEFORE TURNING...GIVE THEM A PUSH, YOU'LL FEEL THEM SETTLE IN COMPLETELY.

BE SURE TO JUST **START** LAGS INTO THE HOLES ON THE FRAME RAILS FOR ASSEMBLY. SPEND TWO ROUNDS TIGHTENING LAGS SLOWLY AROUND EACH BED SURFACE SO THAT YOU DON'T BREAK OUT THE MATTRSS/GUARD RAILS BY DRIVING LAGS IN CROOKED.

ASSEMBLY INSTRUCTIONS


- 1) Attach mattress rails to headboard, and footboard with eight lag bolts and tighten as instructed above.
- 2) Roll out Slat Kit across top bunk bed surface, resting on the mattress rail cleats, placing the outer two slats tightly against the bunk bed ends. Install a Slat screw through the slat into the cleat at each of the 4 corners of the bed. A split slat won't hurt anything if the screw holds the slat in place.
- 3) Lay 3 loose mattress slats into the 3 gaps build into the Slat Kit and install slat screw through slat into mattress rail cleats. (SEE DIAGRAM ON NEXT PAGE FOR SLAT PLACEMENT)
- 4) Add mattress

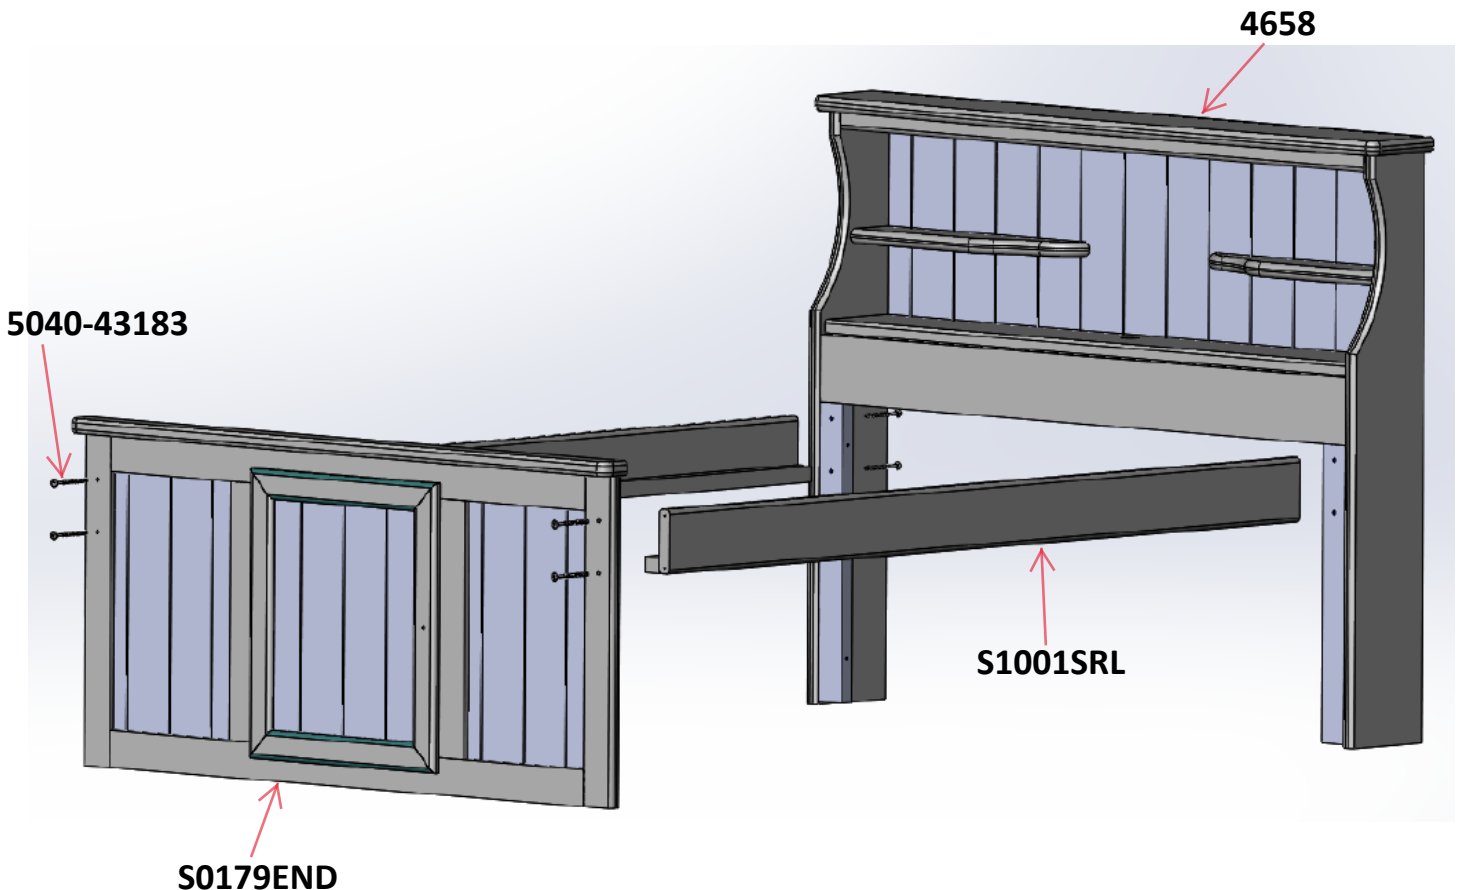

Scan Code for Instructional video




Diagram 1

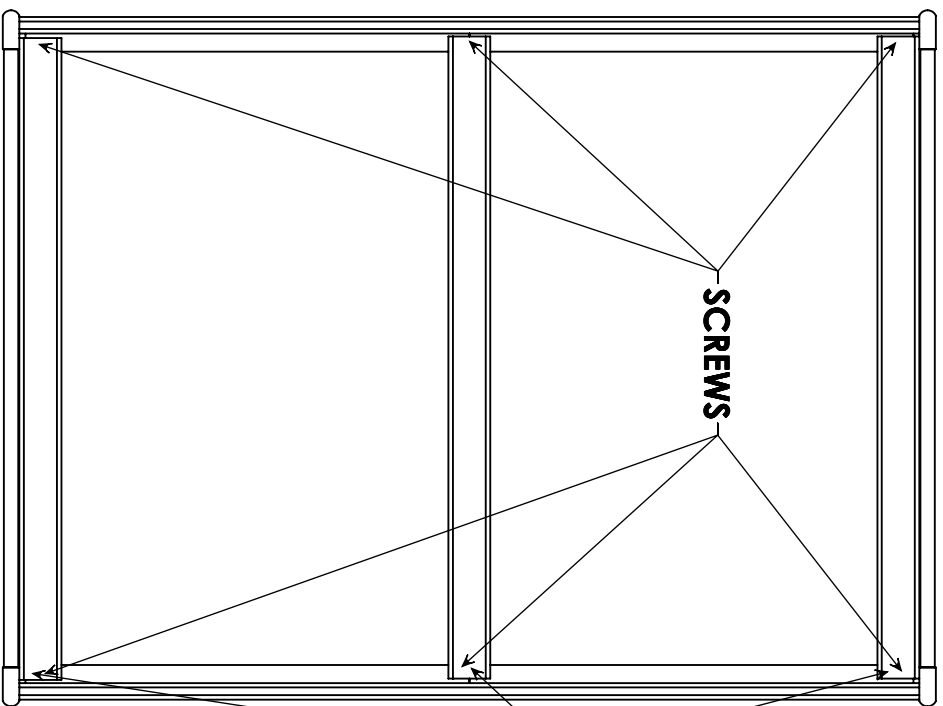

Installation of individual slats for use with Bunkie Board (Bunkie Board sold separately) See your retailer for purchase of Bunkie Board


When used with a slot roll, the three individual slats should be placed evenly in the gaps and underneath the strapping before fastening.

Diagram 2

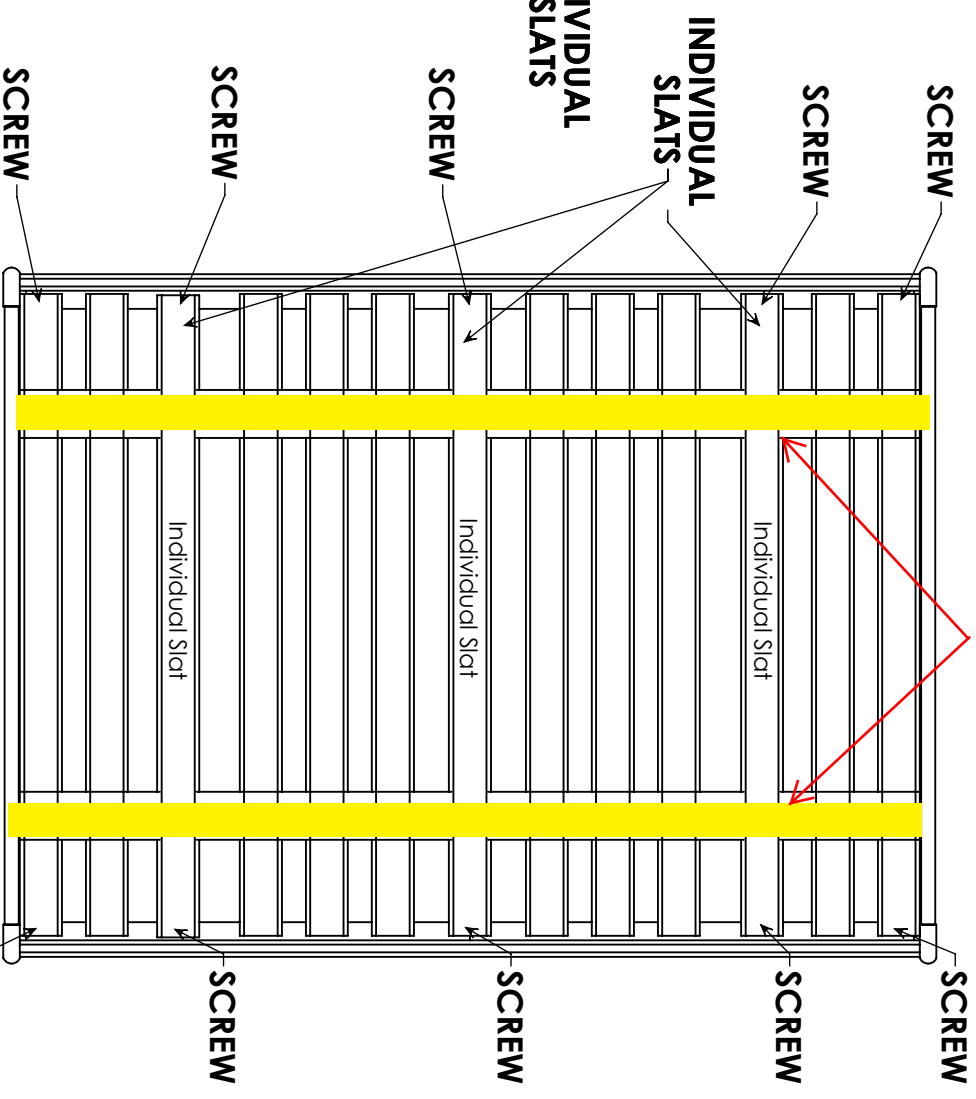

Installation of individual slats for use with Slot Roll (Slot roll sold separately) See your retailer for purchase of Slot Roll

7030-01195 KIT

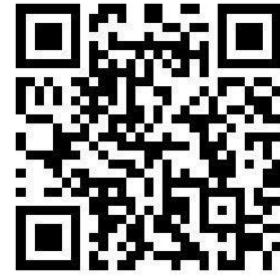

(Scan code for instructional video)

Mateo/Summit Collections: Knob and Pull Installation

1. Locate the box containing your knobs and/or pulls in the bottom drawer of your case good.
2. Identify which of the screw sizes is correct for your drawers/doors. The screw should protrude no more than 1/4" when pushed through the pre-drilled holes on your drawers/doors.
3. Push the screw through the back of the pre-drilled hole on the drawer/door and line it up with the thread on the back of the knob/pull.
4. Tighten the screw into the back of the knob/pull until the knob/pull is tight against the front of your drawer/door.

****You can tighten your screws with either a phillips screwdriver, a drill with a phillips bit, or your hand****

