

ASSEMBLY INSTRUCTIONS

LUCA FULL PANEL BED

ITEM NO: Y2103W-333/334 SKU: 314657/314658

 Y2103B-333/334
 314569/314570

 Y2103G-333/334
 314613/314614



	BOX 1- FL HEAD	BOARD/FOOTBOARD/SLAT	S PANEL BED	
PART	SKU#	IMAGE	DESCRIPTION	QTY
A	1994F-A-W: (White) 1994F-A-B: (Blue) 1994F-A-G: (Grey)		Headboard	1
\bigcirc B	1994F-B-W: (White) 1994F-B-B: (Blue) 1994F-B-G: (Grey)		Footboard	
E	1994F-E		Slats	1
	ВО	X 2- FL RAILS PANEL BED		
PART	SKU#	IMAGE DESCRIPTION		QTY
<u>(C)</u>	1994F-C-W: (White) 1994F-C-B: (Blue) 1994F-C-G: (Grey)		Rails	2
D	1994F-D-W: (White) 1994F-D-B: (Blue) 1994F-D-G: (Grey)		Slat support	1

Hardware List of Luca Full Panel Bed

Part	SKU#	IMAGE	DESCRIPTION	QTY
1	1994F-1(8)	0	Bolts M8*20mm	8
2	1994F-2(14)	(3) Managange	Screws 8#*30mm	14
3	1994F-3(1)		Allen key 60*22*4mm	1


Note: Screwdriver will be prepared by yourshelf.

THE HARDWARE IS LOCATED IN THE PACKING ITEM

NOTE: MUST TIGHTEN SCREWS PERIODIACLLY. WITH USE SCREW MAY ENCOME LOOSE CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.


CLEANING INSTRUCTIONS:


After assembly, clean and polish the completed parts if necessary with soft cloth and industrial recognized furniture polish.

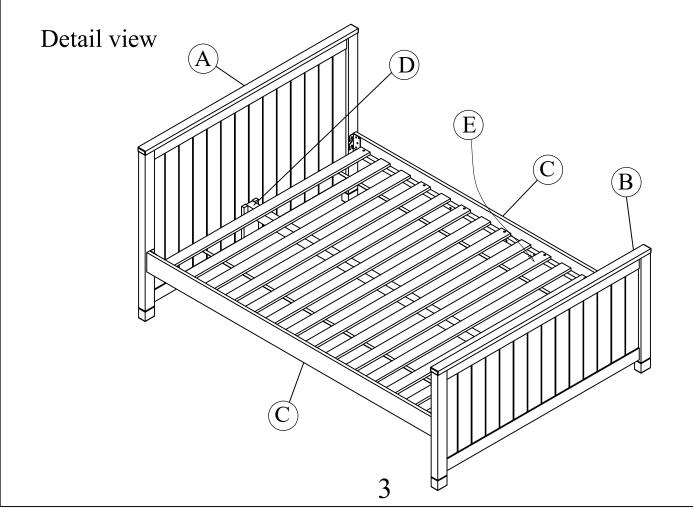



STEP 1:

- Attaching Bolt (1) to Pre-holes on Headboard (A), Footboard (B). Please be noted that "*should not tighten*" bolts.
- Connecting the hook on Rail (C) to Bolt (1) and fasten again.



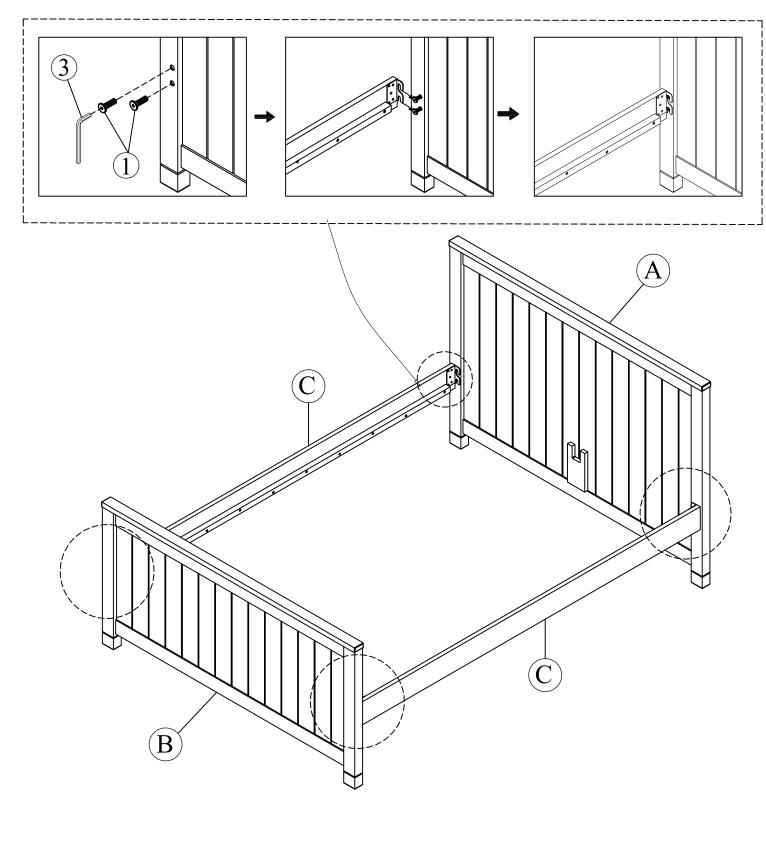

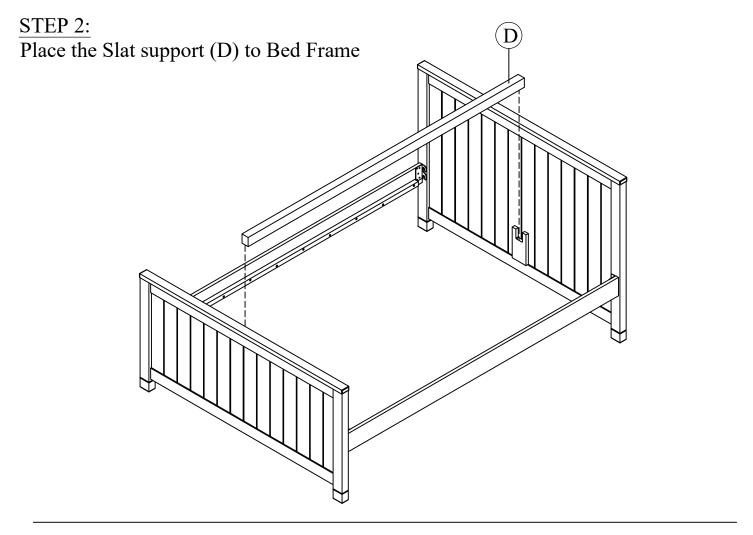

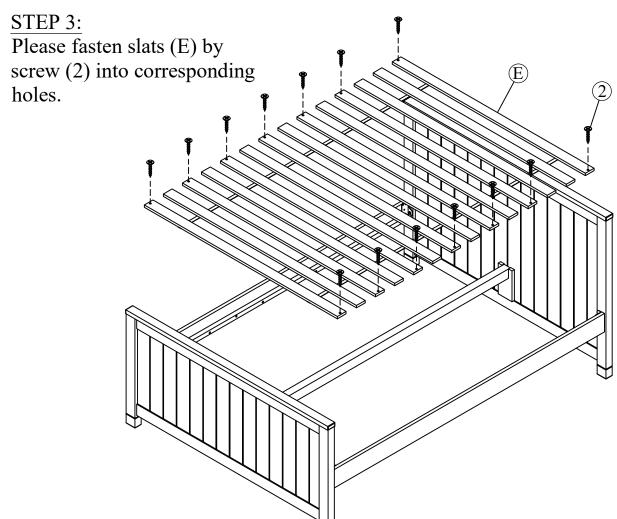

2=14 Pcs






ASSEMBLY INSTRUCTIONS

LUCA PANEL/BUNK/DAYBED TRUNDLE

Y2103G-348 314627

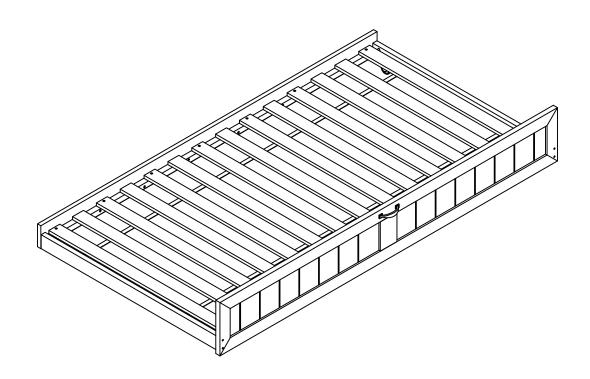

Part list					
PART	SKU#	IMAGE	DESCRIPTION	QTY	
A	1996-A-W: (White) 1996-A-B: (Blue) 1996-A-G: (Grey)		Front	1	
(B)	1996-B-W: (White) 1996-B-B: (Blue) 1996-B-G: (Grey)		Back rail	1	
<u>(C)</u>	1996-C-W: (White) 1996-C-B: (Blue) 1996-C-G: (Grey)		Side rails	2	
(D)	1996-D		Slats	1	

Hardware List of Luca Trundle

Part	SKU#	IMAGE	DESCRIPTION	QTY
	1996-1(8)		Bolt and nut M8*70mm	8
2	1996-2(2)		Bolts M4*20mm	2
3	1996-3(4)		Dowel Ø8*40mm	4
4	1996-4(14)	(S) Management	Screws 8#*30mm	14
5	1996-5(1)		Handle	1
6	1996-6(1)		Allen key 60*22*4mm	1


Note: Screwdriver will be prepared by yourshelf.
THE HARDWARE IS LOCATED IN THE PACKING ITEM

NOTE: MUST TIGHTEN SCREWS PERIODIACLLY. WITH USE SCREW MAY ENCOME LOOSE CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

CLEANING INSTRUCTIONS:

After assembly, clean and polish the completed parts if necessary with soft cloth and industrial recognized furniture polish.

Detail view

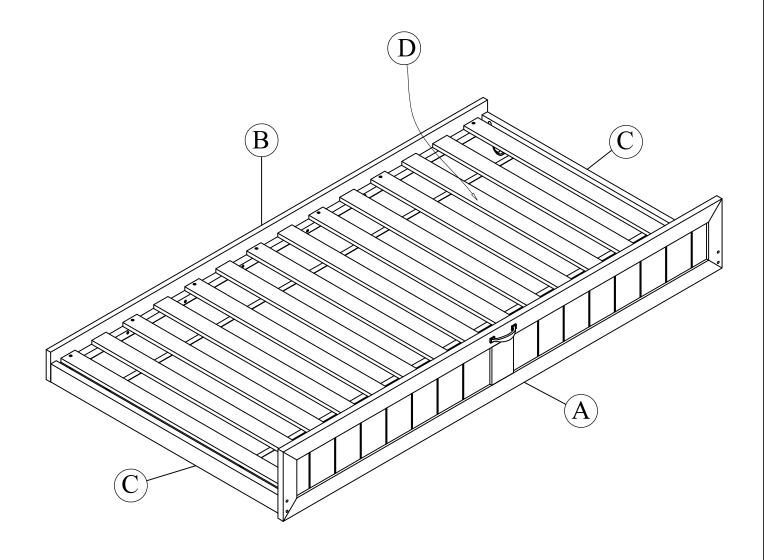


STEP 1:


Firstly, please locate Side Rail (C) to Front (A), Back (B) by dowel (3).




- Fasten Side Rail (C) by (Bolt+nut) (1).

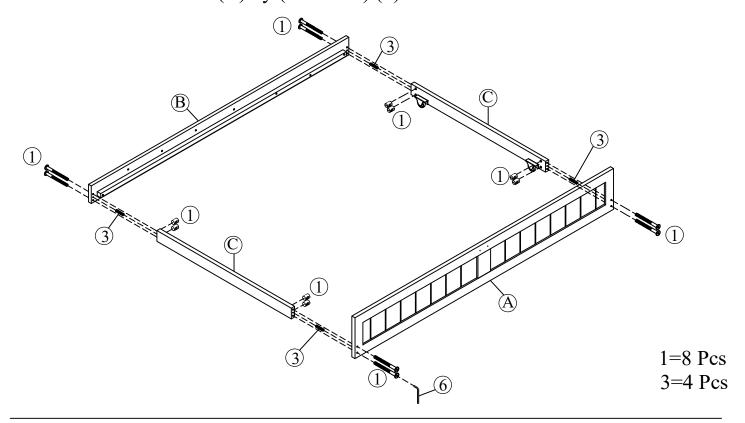


STEP 2: Please fasten slats (D) by screw (4) into corresponding holes.

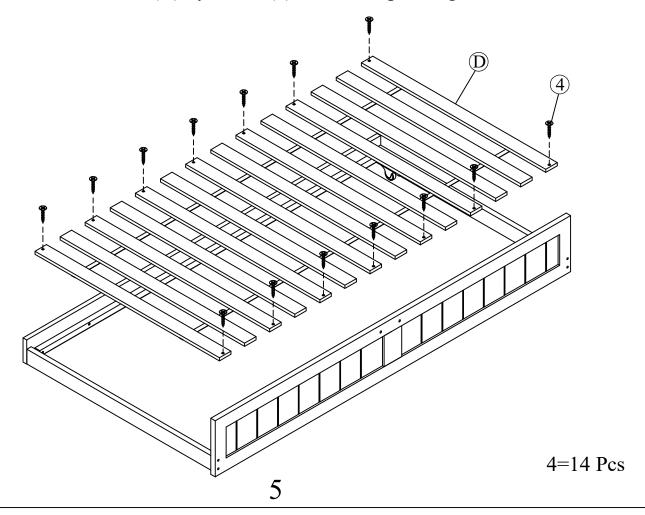

STEP 3: Assemble the handle (5) into Front (A)

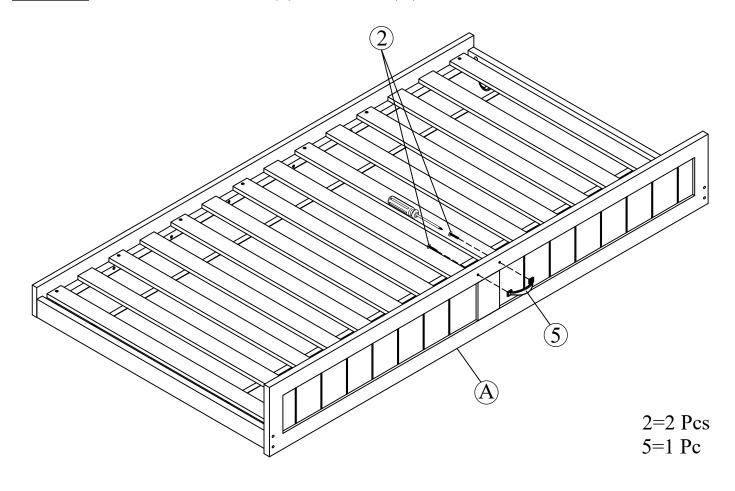

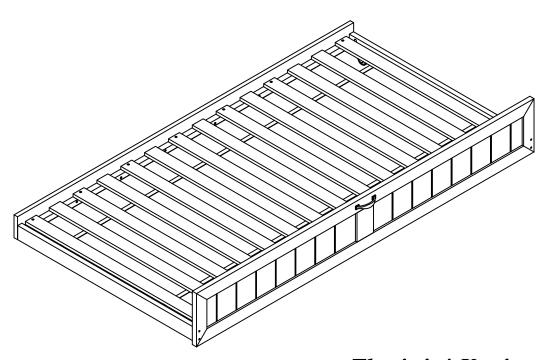

That's it! You've finished assembling your item. Thank you!