




	<b>MAS90: 5043-43256</b>
	<b>SUMMIT ROOMSAVER HARDWARE</b>
<b>QTY:</b>	<b>DESCRIPTION:</b>
8	100MM DECORATIVE HEAD LAG BOLTS
1	4MM ALLEN WRENCH
10	6 X 1 1/4" PHIL FLAT PARTICLE BOARD SCREW
1	4MM POWER DRILL DRIVER
2	4" X 2" MENDING PLATES
2	710124 F 2" MENDING PLATES
16	#8 X 1" PHIL PAN SMS ZINC SCREWS
4	2 1/4" L BRACKET
16	#8 X 3/4" PHIL PAN SMS ZINC SCREWS

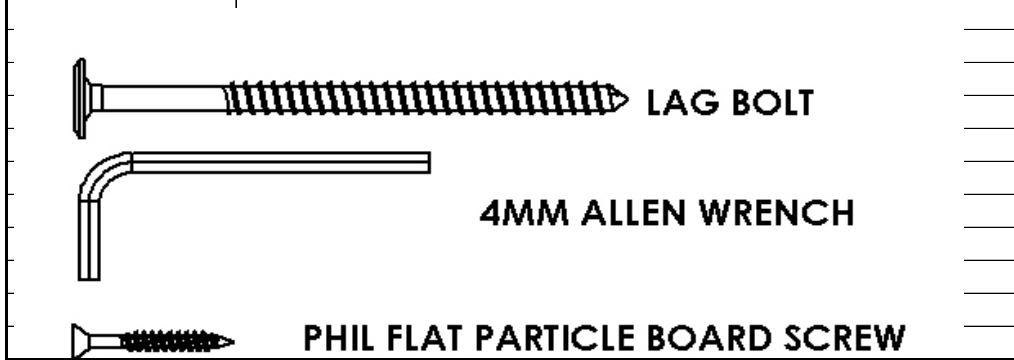

4MM POWER DRILL DRIVER

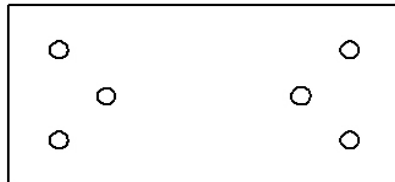


4" X 2" MENDING PLATE



2" MENDING PLATE



#8 X 1" PHIL PAN SMS ZINC SCREWS

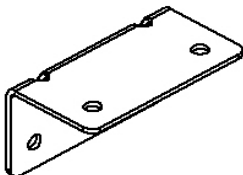

2 1/4" "L" BRACKET



#8 X 3/4" PHIL PAN SMS ZINC SCREWS

ASSEMBLY: 1 PERSON AND 45 MINUTES

**TOOLS:**


- 1) 4mm Allen Wrench (INCLUDED)
- 2) 4mm Allen Drill Bit  
(Be sure to FULLY SEAT the bit into bolt head before turning)
- 3) Phillips Screwdriver

\*We recommend using a power driver with the drill bits if available\*

**BE SURE THE LAG BOLTS ARE STARTED INTO THE HOLES ON THE FRAME RAILS DURING ASSEMBLY. DO NOT FULLY TIGHTEN UNTIL ASSEMBLY IS LOOSELY COMPLETE.**

4660/4663/4664 SUMMIT FULL ROOMSAVER

4660/4661/4662 SUMMIT TWIN ROOMSAVER

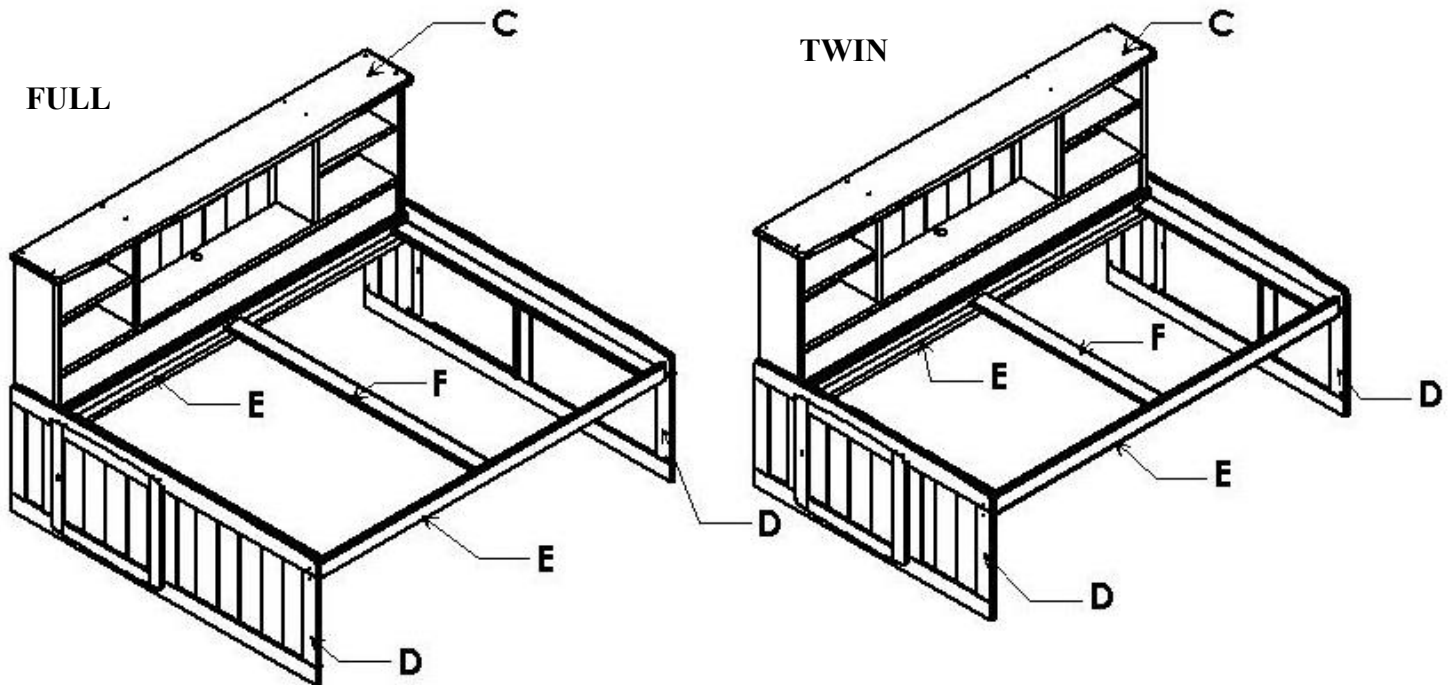

**PARTS LIST:**

- A) 8 - 100mm Decorative Head Lag Bolts
- B) 1 - Roomsaver Headboard (same Headboard for Twin and Full bed)
- C) 2 - End Assembly w/ doors. Doors open outward to determine Right side or Left side.
- D) 2 - 3 1/4" x 75" Mattress Rails w/Support Cleats
- E) 3 - 3 1/2" x 38 3/4" Loose Slats for Twin bed, or 3 - 3 1/2" x 53 3/4" Loose Slats for Full
- F) 10 - 1 1/4" Wood Screws
- G) 2 - 2" x 4" Mending Plates
- H) 2 - 1/2" x 2" Straight Brackets
- I) 16 - #8 x 1" Screws
- J) 2 - 2 1/4" L-brackets
- K) 8 - #8 x 3/4" Screws


**ASSEMBLY INSTRUCTIONS:**

**Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.**


- 1) Attach two mattress rails (E) to headboard/footboard assemblies (D) with 8 lag bolts and 8 washers, and tighten.
- 2) Spread Slat roll out across bed frame from end to end. Place wood screws in 4 outside corners with slat pushed tightly up against the bed end. Place 3 loose slats into gaps in slat roll, and screw down with wood screws. See Slat installation information on following pages.
- 3) SEE NEXT PAGE FOR HEADBOARD INSTALLATION and L BRACKET INSTALL FOR UNDERDRESSER

**SUMMIT ROOMSAVER**

**HEADBOARD BRACKET PLACEMENT**

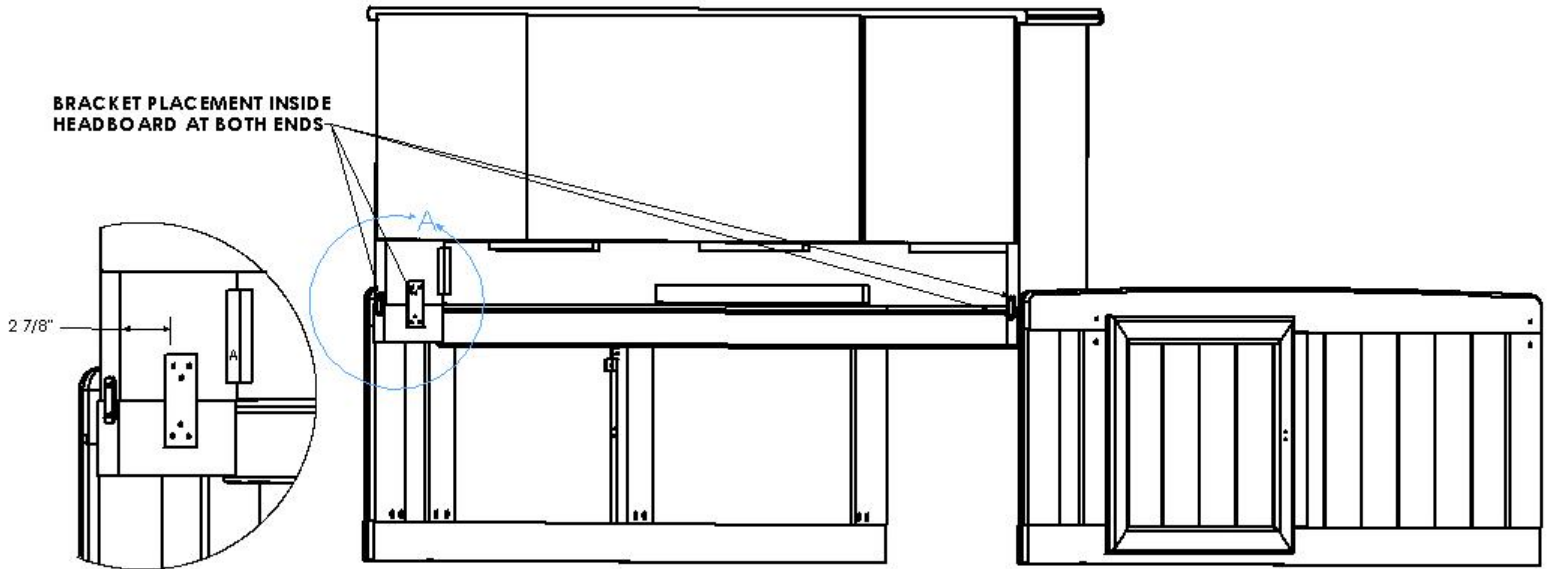


- 5) Attach one 1/2" x 2" straight bracket at each end of the headboard spanning the joint between the top rail of the ends (D) and the bottom edge of the headboard uprights.
- 6) Attach on 2x4' bracket inside each end centered on the headboard ends

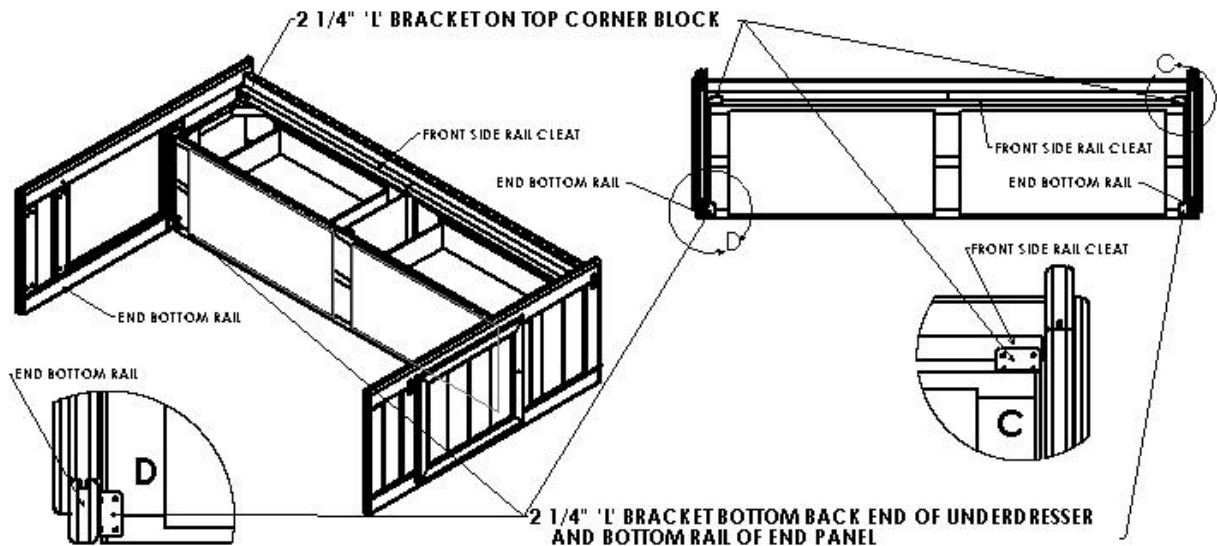


- 7) Attach 2 1/4" "L" brackets to the top of the underdresser corner blocks at each end and to the back of the front side rail cleat as shown in Detail C to the right above. Use two of the 2 1/4" brackets to attach the back, bottom ends of the underdresser to the bottom rail of each end panel as shown in Detail D to the left above.

When used with a slot roll, the three individual slats should be placed evenly in the gaps and underneath the strapping before fastening.

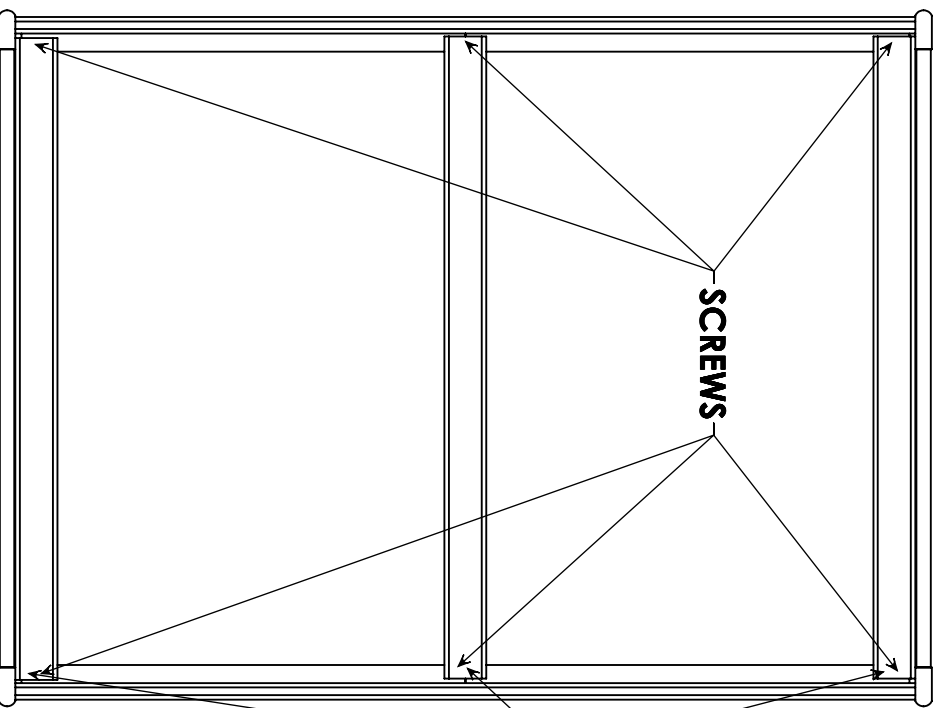

Installation of individual slats for use with  
 Bunkie Board  
 (Bunkie Board sold separately)  
 See your retailer for purchase of Bunkie  
 Board

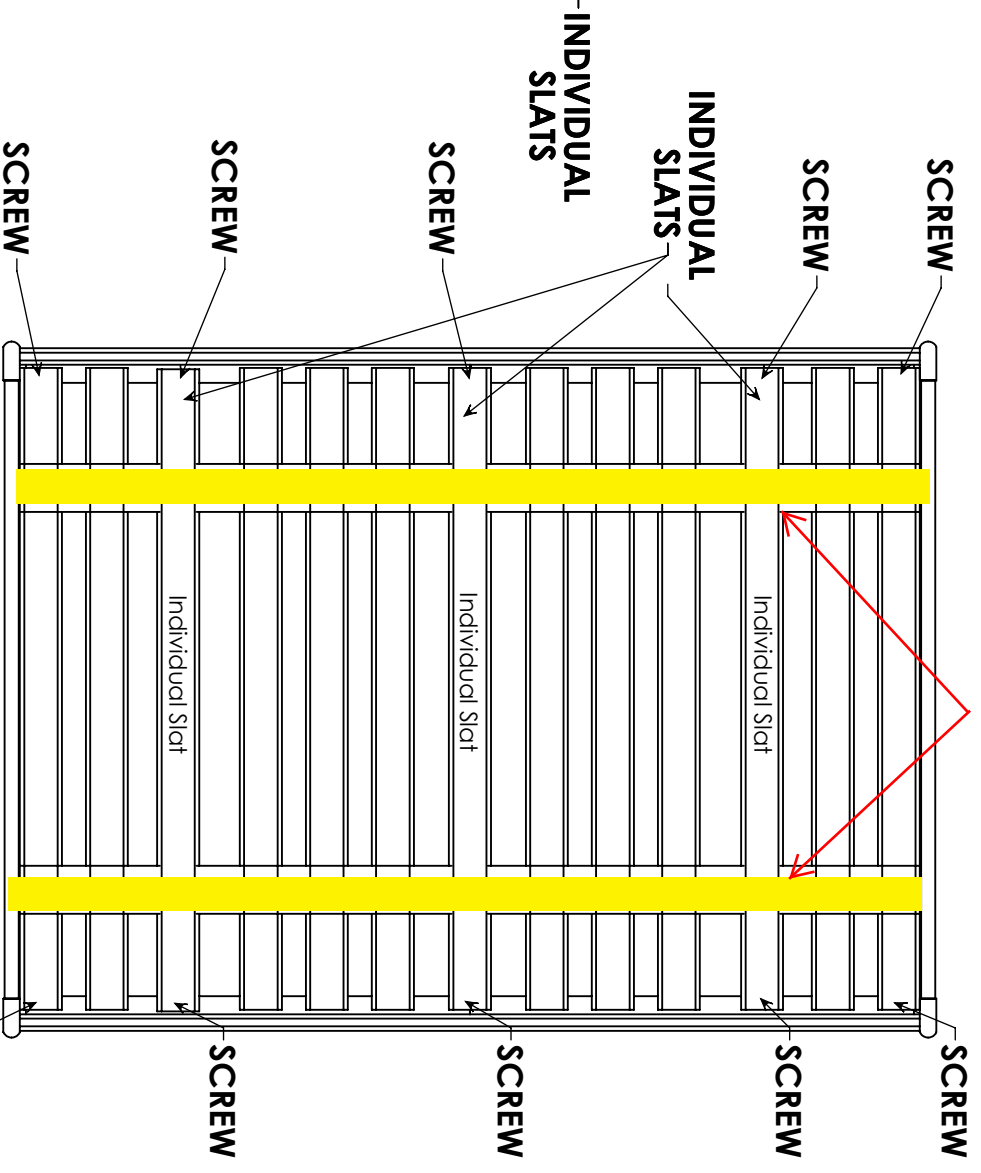

Installation of individual slats for use with  
 Slot Roll  
 (Slot roll sold separately)  
 See your retailer for purchase of Slot Roll