7030-01170 KIT



4660 Headboard/4661 Frame Rails/4662 Twin Ends

Summit Collection: Roomsaver Twin Bed



+ (Scan code for instructional video)

PARTS LIST

BOX 1: 4660 Summit Roomsaver Headboard

| Part # | Picture | Description | Quantity |
|--------|---------|----------------------------|----------|
| 4660 | | Summit Roomsaver Headboard | 1 |

BOX 2: 4662 Summit Roomsaver Twin Ends

| Part # | Picture | Description | Quantity |
|----------|---------|---------------------------------|----------|
| S0174END | | Summit Roomsaver Twin Left End | 1 |
| S0175END | | Summit Roomsaver Twin Right End | 1 |

BOX 3: 4661 Summit Roomsaver Twin Frame

| Part # | Picture | Description | Quantity |
|------------|-----------|---------------------------------|----------|
| S1010SRL | | 5/4 x 4 x 75 Mattress Rail | 2 |
| 149383/40 | | Twin Individual Slat | 3 |
| 5040-43183 | <u> </u> | 7MM x 100MM Decorative Lag Bolt | 8 |
| ALNWR | | 4MM Allen Wrench | 1 |
| PWRDD | | 4MM Power Drill Driver | 1 |
| 5045-40106 | 0 0 | 4" x 2" Mending Plate | 2 |
| 5045-40100 | 0 0 | 2" Mending Plate | 2 |
| 5045-40102 | 0.00 | 2" x 3" Angle Bracket | 4 |
| 5040-35062 | (January) | #8 x 1" Phil Pan Zinc Screw | 32 |
| 5040-35410 | | #6 x 1 1/4 Phil Flat Slat Scew | 10 |

Make sure you have all parts before beginning assembly. If you need a part, contact Living Space

TOOLS REQUIRED:

- 1) 4 MM Allen Wrench (INCLUDED)
- 2) Phillips Head Screwdriver


NOTE: Tool recommended: Electric driver for 4 MM Allen Bit

BE SURE THAT LAG BOLTS ARE STARTED INTO THE HOLES

ON THE FRAME RAILS DURING ASSEMBLY.

START LAG BOLTS INTO ALL RAILS BEFORE TIGHTENING.


COMPLETED ASSEMBLY

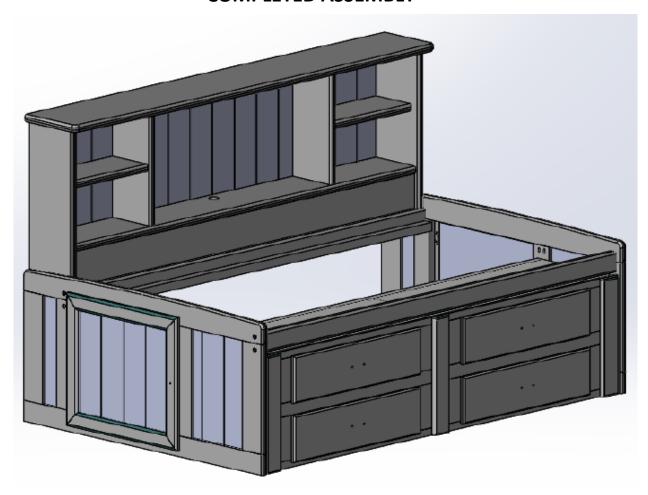

ASSEMBLY INSTRUCTIONS

- 1) Attach two mattress rails to left/right end assemblies with 8 lag bolts, and tighten.
- 2) Place headboard on top of support blocks on inside of end structures and secure it using both the 4"x2" and the 2" mending plates per below illustration. Use 16 of the 5040-35062 screws.
- 3) Slide <u>underdresser</u> underneath front rail and attach, placing the 4 angle brackets in accordance with the below illustration. Use the remainder of the 5040-35062 screws.
- 4) Place 3 mattress supports on mattress rail support cleats with one support in the center, and a support pushed tightly against each end assembly.
- 5) Secure the mattress supports and slat kit (purchased separately) using the 5040-35410 screws in accordance with the diagram on the last page of these instructions.
- 6) Add a dealer-supplied bunk board or slat kit and the proper thickness innerspring bunk mattress.

Step 1

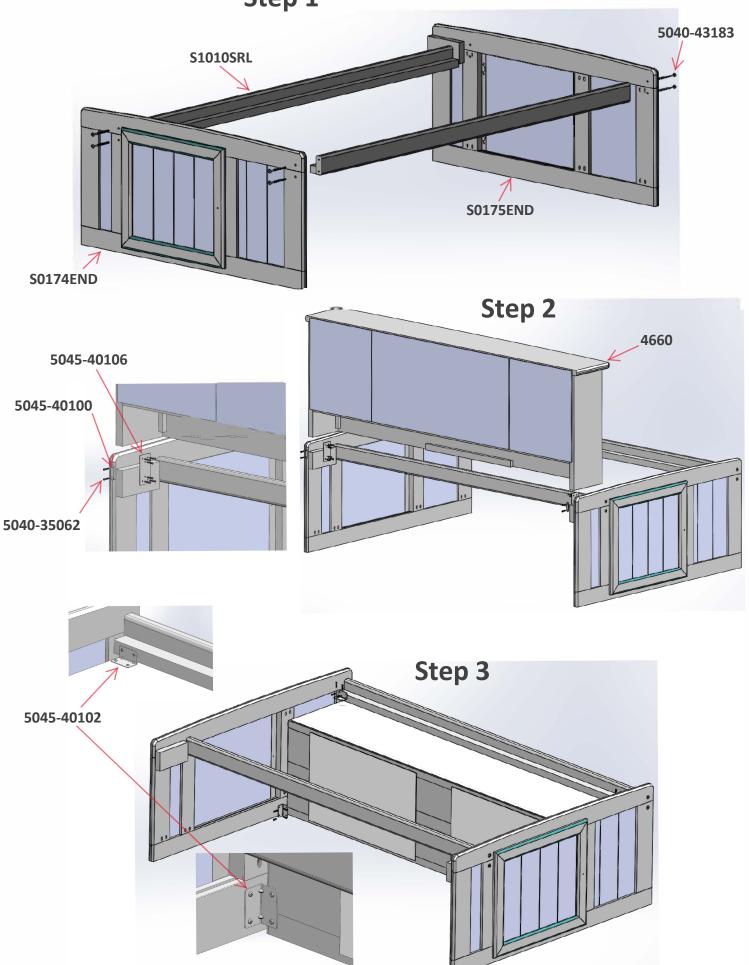


Scan Code for Instructional video



and underneath the strapping before fastening. individual slats should be placed evenly in the gaps When used with a slat roll, the three

Diagram 2



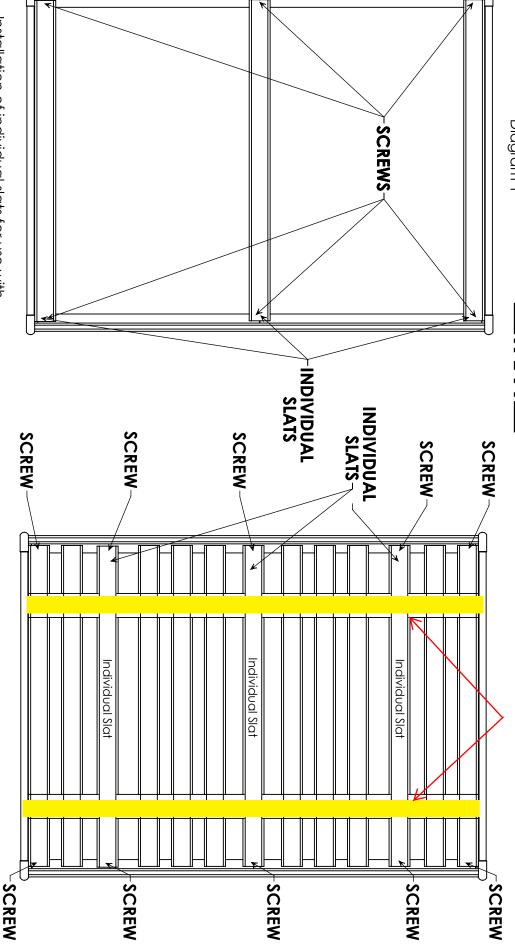

See your retailer for purchase of Bunkie **Bunkie Board** Installation of individual slats for use with (Bunkie Board sold separately)

> Slat Roll (Slat roll sold separately) Installation of individual slats for use with

See your retailer for purchase of Slat Roll

7030-01195 KIT





Mateo/Summit Collections: Knob and Pull Installation

- 1. Locate the box containing your knobs and/or pulls in the bottom drawer of your case good.
- 2. Identify which of the screw sizes is correct for your drawers/doors. The screw should protrude no more than 1/4" when pushed through the pre-drilled holes on your drawers/doors.
- 3. Push the screw through the back of the pre-drilled hole on the drawer/door and line it up with the thread on the back of the knob/pull.
- 4. Tighten the screw into the back of the knob/pull until the knob/pull is tight against the front of your drawer/door.

You can tighten your screws with either a phillips screwrdiver, a drill with a phillips bit, or your hand

